


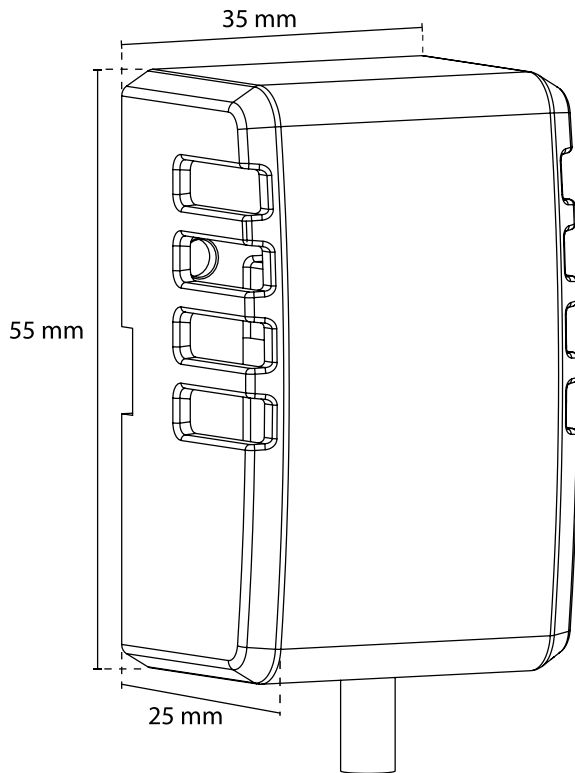
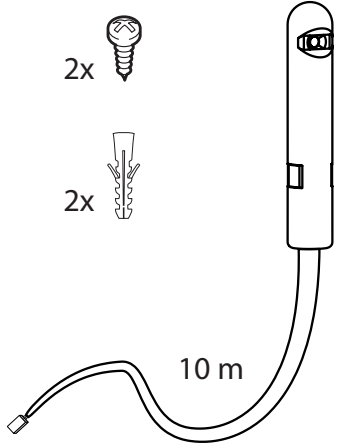


INSTRUCTION



External RH sensor for CDP-(T)/CDF 40-50-70

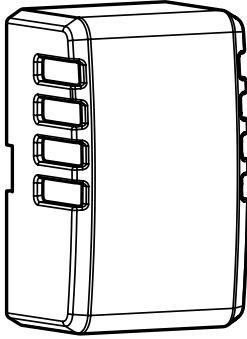

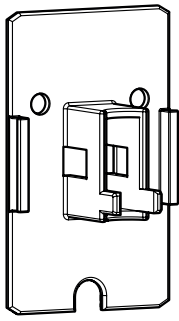


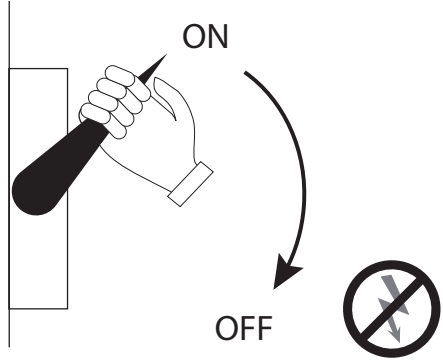


1

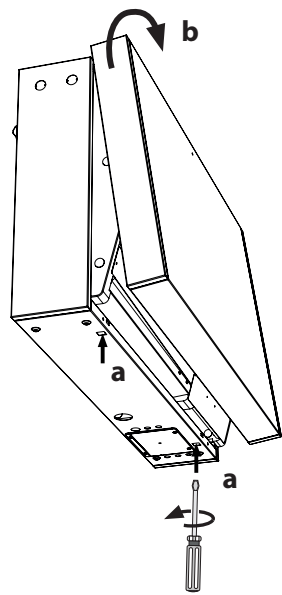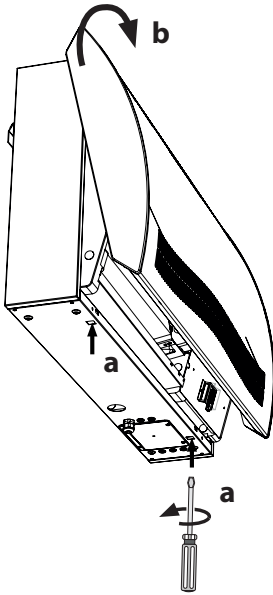


2

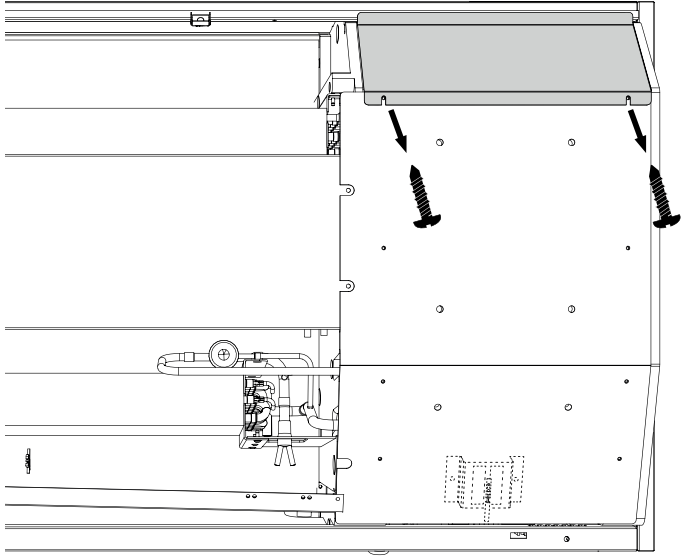


3

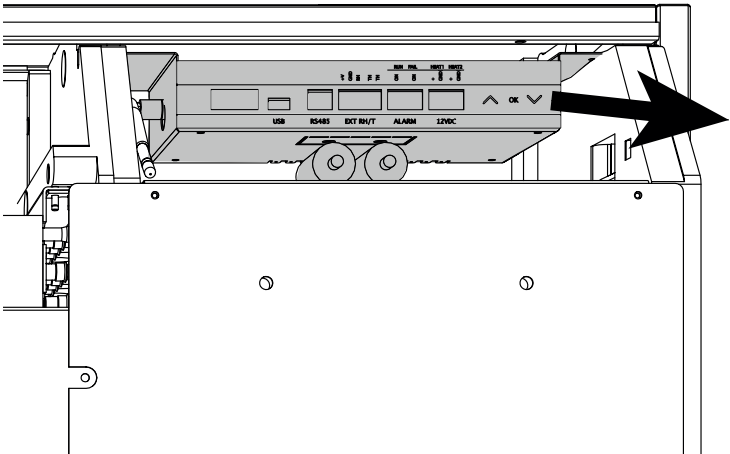


4

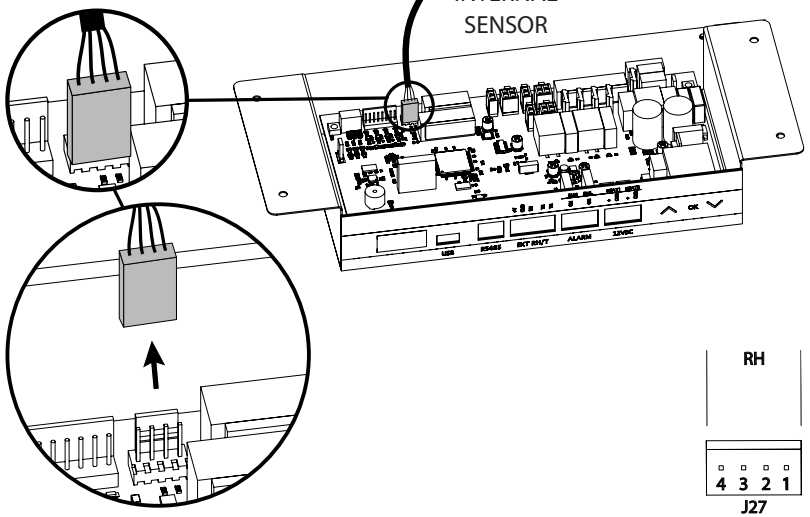


5

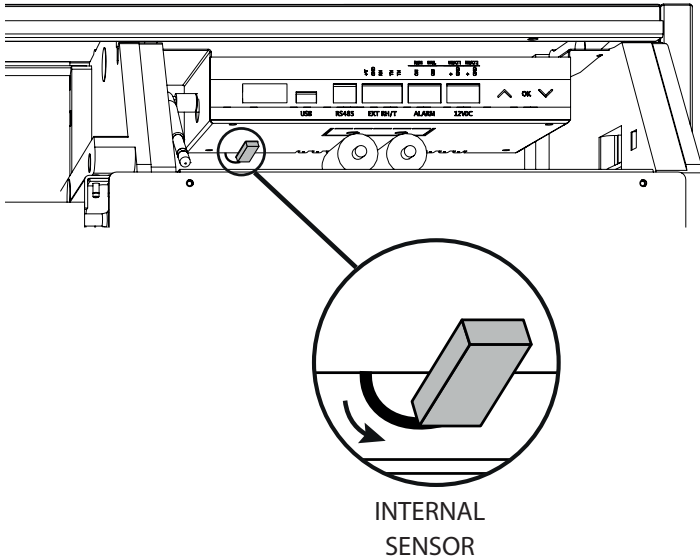


6

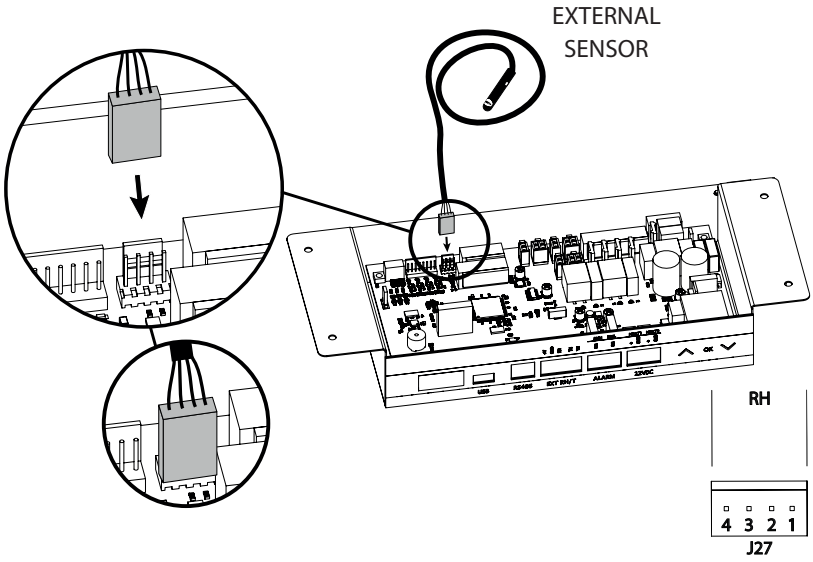


7

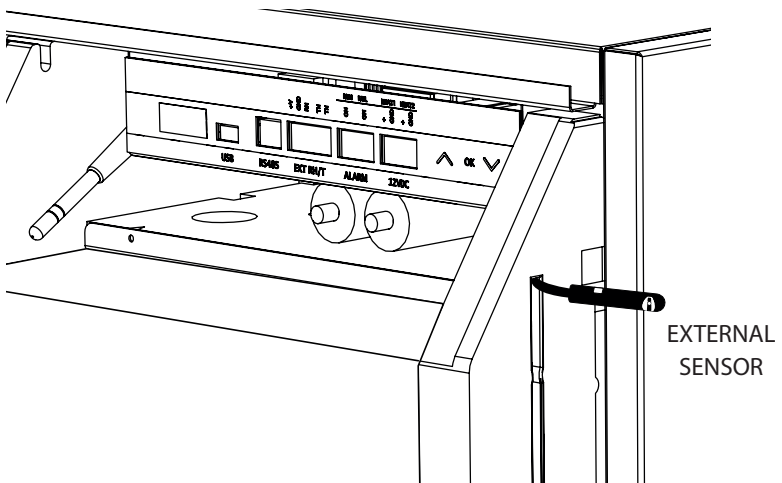


8

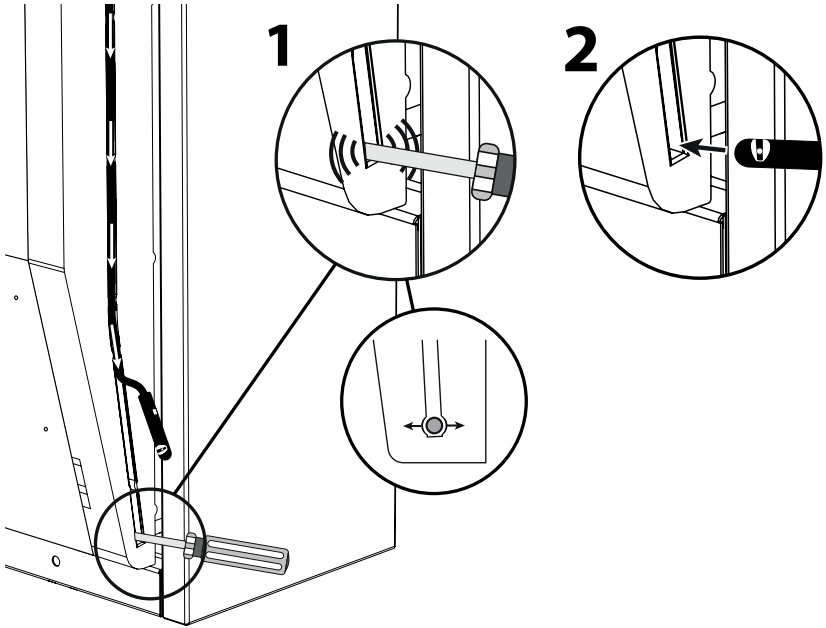


9

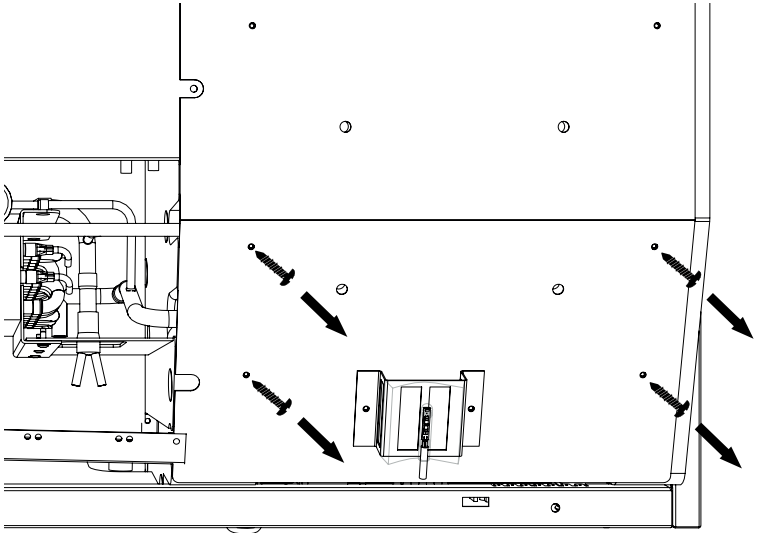


10

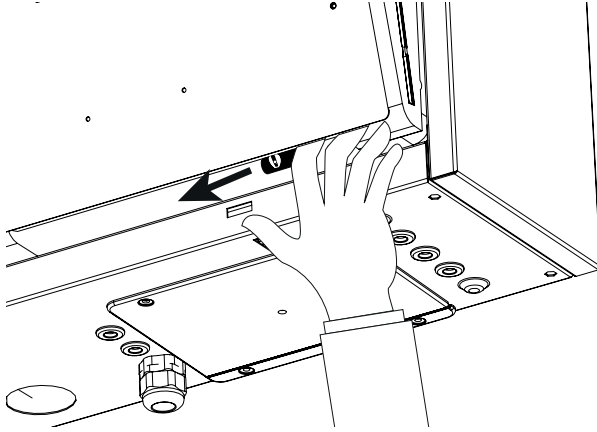


11

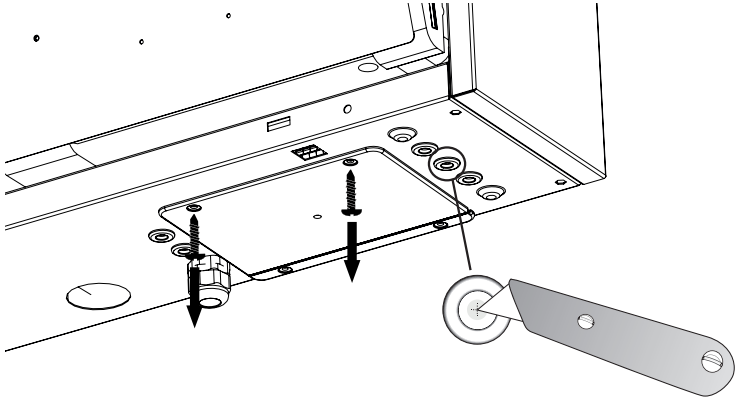


12

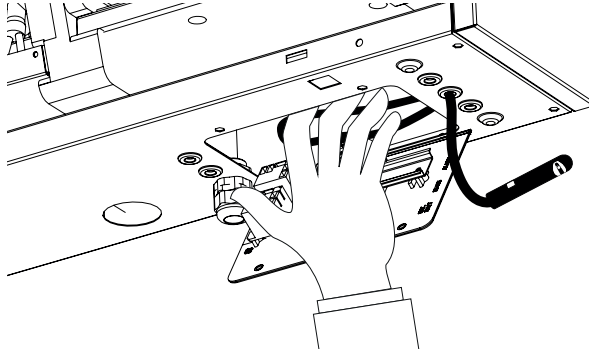


13

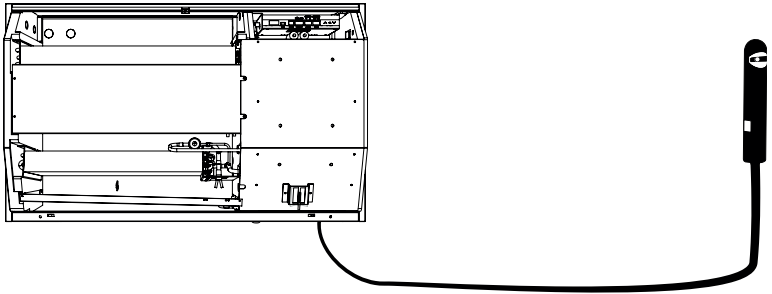


14

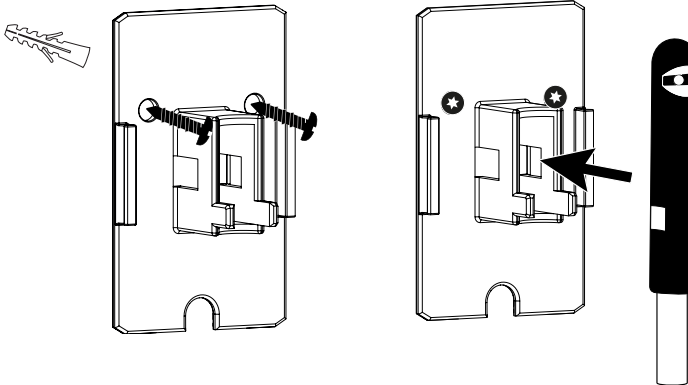


15

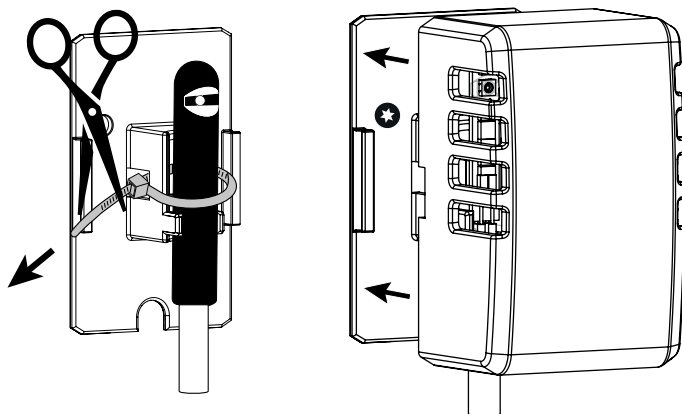


16

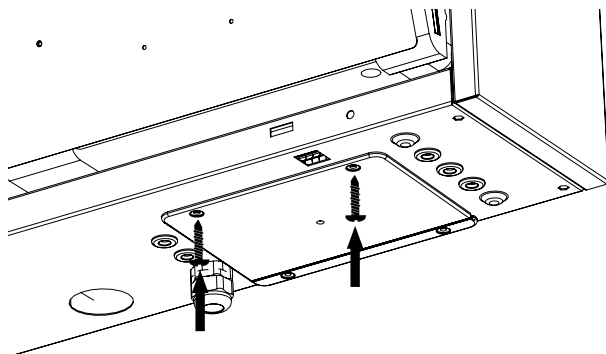


17

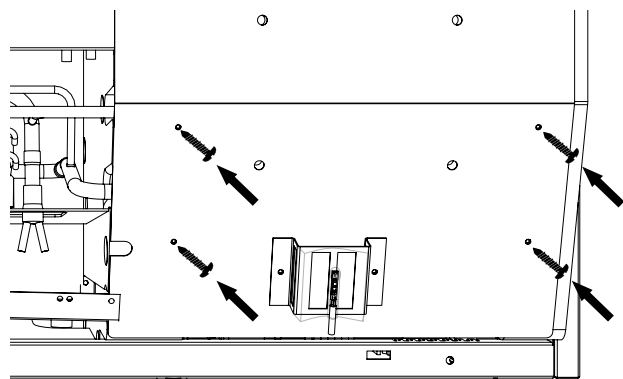

18

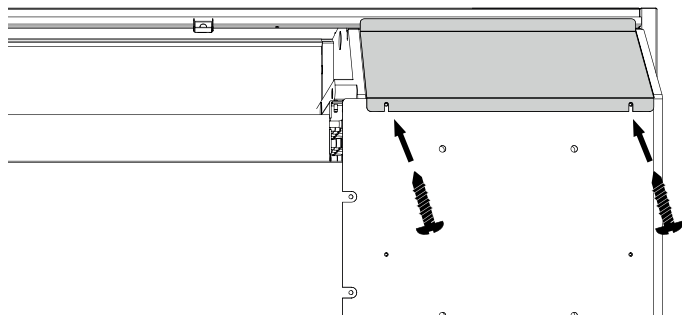

19

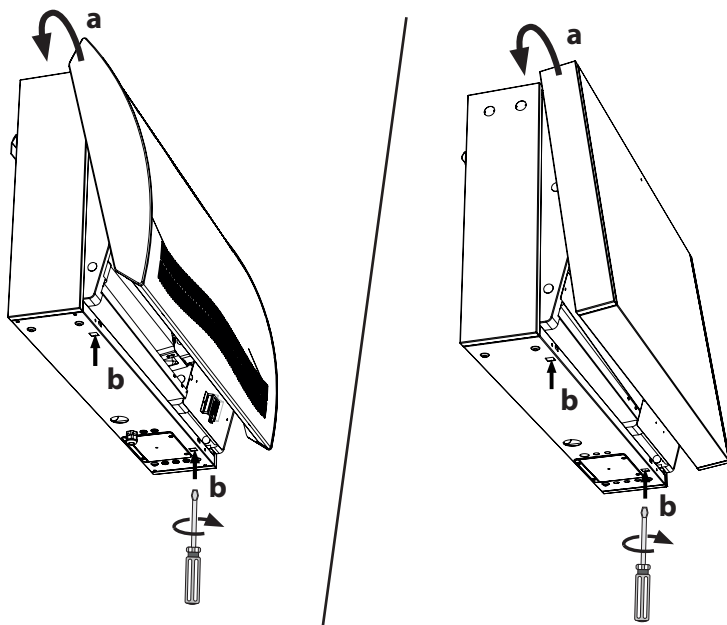



052506